

# ROUGH COUNTRY

## SUSPENSION SYSTEMS®



**WARNING:** This product contains a chemical known to the State of California to cause Cancer and Reproductive Harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

## 2019-23 DODGE RAM DOUBLE CAB UNDERSEAT STORAGE

**Congratulations on your purchase of the Rough Country Underseat Storage Box. The Underseat Storage Box gives you a place to store loose items and clutter, and ultimately help keep your vehicle organized.**


### INCLUDED IN HARDWARE KIT:

1.



Underseat Storage Box  
1 pc

2.



Driver Side Foam  
Divider  
1 pc

3.



Passenger Side Foam  
Divider  
1 pc

4.



Metal Bracket  
2 pcs

5.



Safety Strap  
2 pcs

6.



Double-Lock Buckle  
2 pcs

### TOOLS FOR EASY INSTALLATION:


- 18mm socket
- Marker or Grease Pencil (optional)
- Utility Knife (optional)

**PLEASE READ:** Rear cabin area must be free of debris and items prior to installation of Underseat Storage Box.

## UNDERSEAT STORAGE BOX INSTALLATION



Lift the rear seat for installation of Underseat Storage Box.

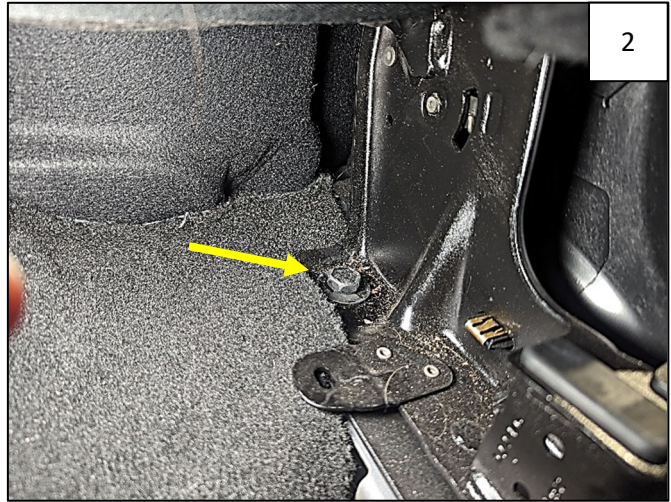


Using an 18mm socket, remove and retain bolt at base of seat on Driver side.



Using an 18mm socket, remove and retain bolt at base of seat on Passenger side.



Feed each Safety Strap through the wide slot in each supplied Metal Bracket.

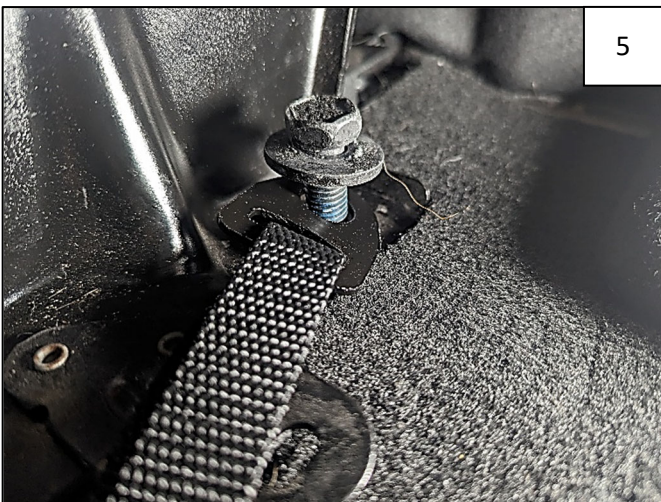

Slide Metal Bracket-Strap combo over each bolt removed in Step 2 & 3. Reinstall bolts.



Place the Underseat Storage Box as shown. Strap slots should face rear of vehicle. Front of Underseat Storage Box is taller than rear. Install Foam Dividers in molded-in slots in Underseat Storage Box.



Thread buckle onto one end of safety strap. Feed other end of Safety Strap into Buckle and tighten to anchor Underseat Storage Box in place.



Complete Underseat Storage Box installation.

## CUTTING DIVIDERS TO STORE LONG ITEMS



If you want to store long items lengthwise in the Underseat Storage Box, lay the item in the Box (over the top of the dividers) in the position you would like to store it in. Alternately, you may remove the dividers and skip the next steps, however, items may shift in transit.



Use a marker or grease pencil to trace the width of the item on each Foam Divider. Remove item and trace the depth at which you would like the item to rest. NOTE: Cutouts should be fairly snug.



Use a utility knife to carefully cut the corresponding section out of each Foam Divider.



Lay long items in Underseat Storage Box as shown, pressing into the cutouts in the foam.